TOTE VISION®

LCD-1044T/1044TW

10.4" LCD Color Monitor/TV

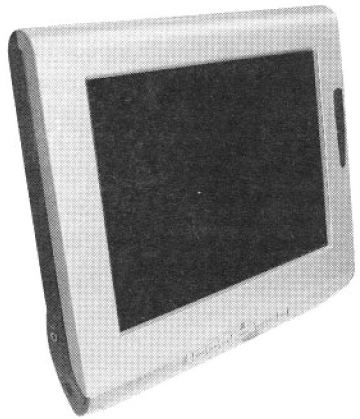

USER'S MANUAL

1319 Dexter Ave. N., Suite 020
Seattle, WA 98109
Tel: 206 623 6000
Fax: 206 623 6609

Important Notes :

1. Before operating the unit, please read these instructions carefully.
2. Retain this manual for future reference.
3. Do not remove any WARNING stickers on the unit.
4. You are advised to follow the instructions carefully when operating the unit.
5. Do not use any chemical solvent, cleaning agent or corrosive detergent to clean away dirt on the surface of the screen. By doing so, you may cause irreversible damage to the surface of the TFT screen. To clean off dirt or fingerprints, we recommend the use of a soft damp lens cleaning cloth.
6. Using spare parts from another manufacturer may caused permanent damage to the unit.
7. Place the unit on a flat, hard and stable surface.
8. Avoid installing the monitor screen in a position that is under direct sunlight and place unit away from hot air vent.
9. Install unit in a dry location away from condensation.
10. Keep ventilation areas clear to allow unit to cool properly.
11. Ensure the plugs are properly plugged in before operating the unit.
12. Should the LCD panel be broken, avoid all human contact with the broken glass or fluid leaking out from the enclosure. If you come into contact, flush and clean affected areas with plenty of water. Seek medical attention immediately.
13. When operating the display unit, avoid touching or pressing on the LCD glass panel. Excessive force may cause irreparable damage to the LCD screen.

LCD-1044T: Unit with separate power supply.
LCD-1044TW: Unit with built-in power supply.

Notices:

1. *The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

2. *To comply with the FCC RF exposure compliance requirments , no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.*

This device complies with part 15 of the FCCRULES. Operations is subject to the following two conditions:

(1) This device may not cause harmful interference and
(2) This device must accept any interference received, including interference that may cause undisried operation.

Safety Precautions:

1. *Ensure the plug is securely plugged into the main socket before operating the unit.*
2. *Ensure the Voltage on the main socket is the same as specified on the unit.*
3. *In the event of thunder & lightning or when not using the unit for a long period of time, remove the plug from the main socket for safety.*
4. *Do not plug in too many appliances together with this unit to prevent overloading the power supply.*
5. *Use parts only manufactured by the unit manufacturers.*

In case of the following emergencies, remove plug from the main socket immediately:

1. *Plug or cables are damaged.*
2. *Any form of foreign objects dropped inside the enclosure.*
3. *Unit is being exposed to rain and/or water.*
4. *Unit unable to operate under normal operation.*

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).
NO USER - SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL

The lighting flash with Arrowhead Symbol within an equilateral triangle is intended to alert the user to the presence of "uninsulated " dangeros voltage" within the product's enclosure that may be of sufficient magnitude to consistute a risk of electric shock to persons.

The exclamation point within an equilater triangle is intended to alert the user to the presence of important operating and maintenace (servicing) instrucion in the literature accopmpanying the appliance.

CONTENTS

1. INTRODUCTION
Overview ---------- 01
Product Specification ---------- 02
Contents/Accessories ---------- 03

2. FRONT PANEL CONTROLS
Panel Control ---------- 04
Input/Output ---------- 04

3. REMOTE CONTROL FUNCTION
Controls & Functions ---------- 05

4. INSTALLATION GUIDE
When Connecting to a TV Cable ---------- 06
Installation Guide for LCD-1044TW ---------- 07
Connecting to the AV in Socket ---------- 08
Output (RCA) to other AV Equipment ---------- 08
Connect Power ---------- 09

5. BASIC FUNCTIONS
Power Signal ---------- 10
Mode ---------- 10
Volume Setting ---------- 11
Mute ---------- 11
Channel Search ---------- 11
TV Station Memory Mode ---------- 12

6. OPERATIONS
Menu Setting ---------- 13
Sleep Timer Setting ---------- 13
Video Adjust Setting 14
Saturation / Sharpness / Brightness / Contrast / Tint / 14
Preset / Exit ---------- 16

FM TRANSMITTER ---------- 17

OTHERS
Channel Scan / TV Source Setting / Dimmer Setting /
Speaker Setting / Return ---------- 18

7. GENERAL SETUP ---------- 21

8. ANNEX A
LCD Maintenance ---------- 24

9. ANNEX B
Troubleshooting ---------- 25

10. SPECIFICATIONS ---------- 26

12. IMPORTANT SAFETY INSTRUCTIONS ---------- 27

ONE YEAR LIMITED WARRANTY ---------- 28

1. INTRODUCTION

Overview :

A 10.4" Transportable LCD Monitor bearing the basic features of a Television set.

New technology in LCD monitor allows enjoyment of more high quality picture display and higher brightness; lighter in weight and slimmer body design, power saving capabilities and low radiation, giving you a safe, relaxing and environmental-friendly NEW visual enjoyment.

The unit comes with built-in screen display controls when used with the remote control, allowing you to make changes to the settings. It even supports the use of wireless headphones, therefore you do not need to worry that the volume coming out from the monitor will disturb other people.

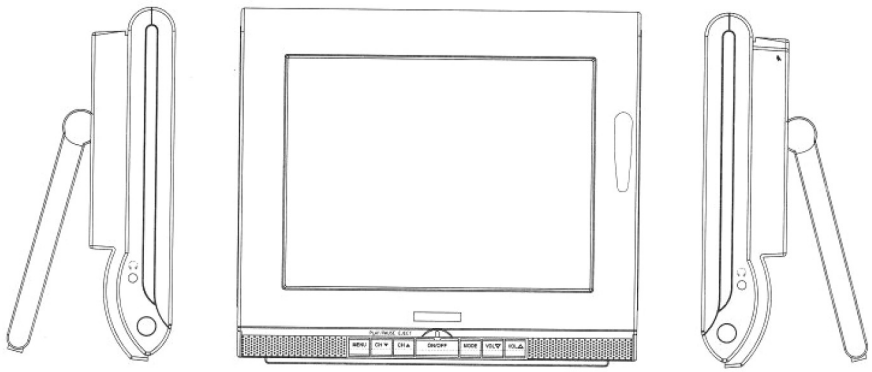

Product Specification :

1. 10.4" LCD Panel
2. Panel Ratio : 4 : 3
3. CATV 2-125 Channels ; UHF/VHF Regular TV
4. Infra-Red Capabilities ; IR Headphone
5. Light Weight
6. Built-in Wall-Mount Support
7. Built-in FM Transmitter
8. Built-in speakers
9. Conventional Headphone Optional
10. A/V Inputs & Outputs
11. AC/DC Operations

Contents/Accessories :

(Please check the content of the Package.)

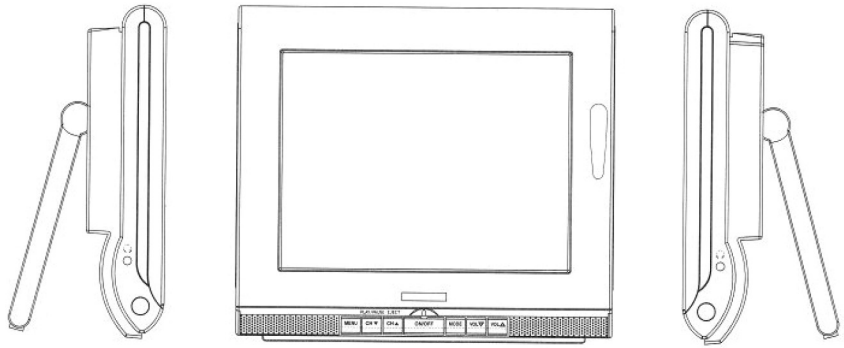

Monitor

Remote Control

User Manual

AC Cable



AC Adaptor

Optional AV Cable

2.FRONT PANEL CONTROLS

PANEL CONTROL :

1. LCD Monitor
2. Remote Sensor
3. IR Transmitter
4. Speakers
5. Volume/Menu Up button
6. Volume/Menu Down button
7. Mode button
8. On/Off button
9. TV channel up button
10. TV channel down button
11. OSD menu button
12. Power/Stand by LED
13. Earphone jack
14. Stand (For LCD-1044T use only)

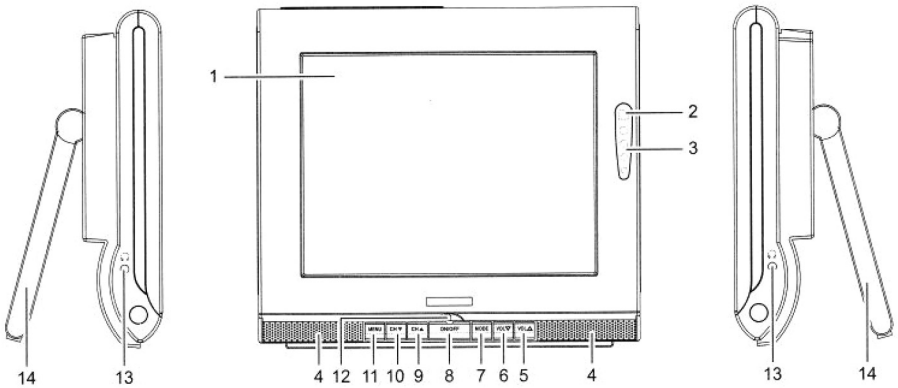

INPUT/OUTPUT :

15. Audio L(Output)
16. Audio R(Output)
17. Video
18. DC In : 12V or AC Adaptor
19. Audio L(Input)
20. Audio R(Input)
21. Video
22. TV ANT

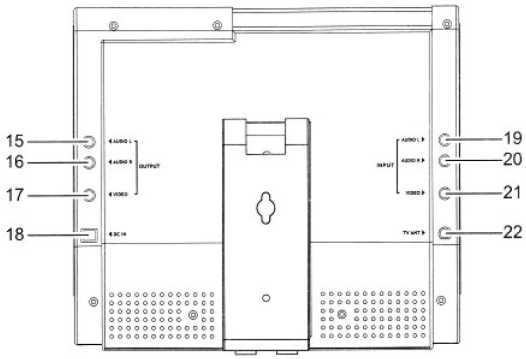

3. Remote Control Function :

(When using the remote control, point it towards the IR sensor.)

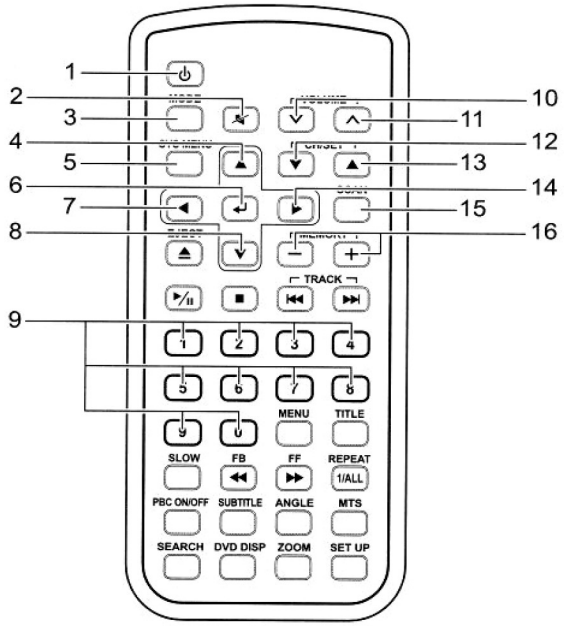

1. POWER : Power On/Off
2. MUTE : Turn Off Volume
3. MODE : Signal Button
4. Up ▲ : Up Button
5. SYS MENU : System Main Menu Selection Button
6. SAVE/ENTER : Enter Button
7. Left ◄ : Left Button
8. Down ▼ : Down Button
9. 1/2/3/4/5/6/7/8/9/0 : Numbers Button
10. VOL ▼ : Decrease Volume Button
11. VOL ▲ : Increase Volume Button
12. CH/ SET ▲ : Channel/Setting Up Button
13. CH/ SET ▼ : Channel/Setting Down Button
14. Right ► : Right Button
15. SCAN : Channel Scanning
16. MEMORY(+/-) : Favorite Channel Saved to Memory Button

4. INSTALLATION GUIDE:

When Connecting to a TV Cable:

1. Plug the cable to the input socket on the unit.

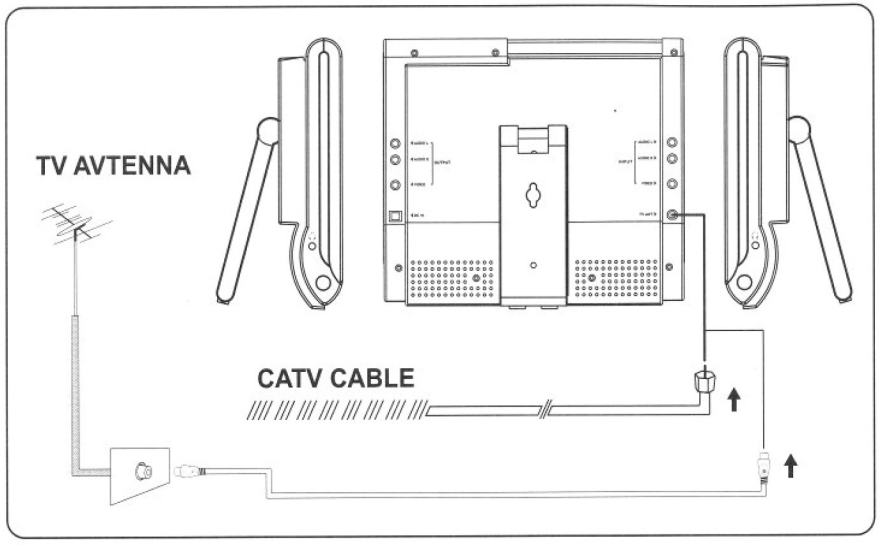

INSTALLATION GUIDE FOR LCD-1044TW:

The LCD-1044TW has built-in power supply

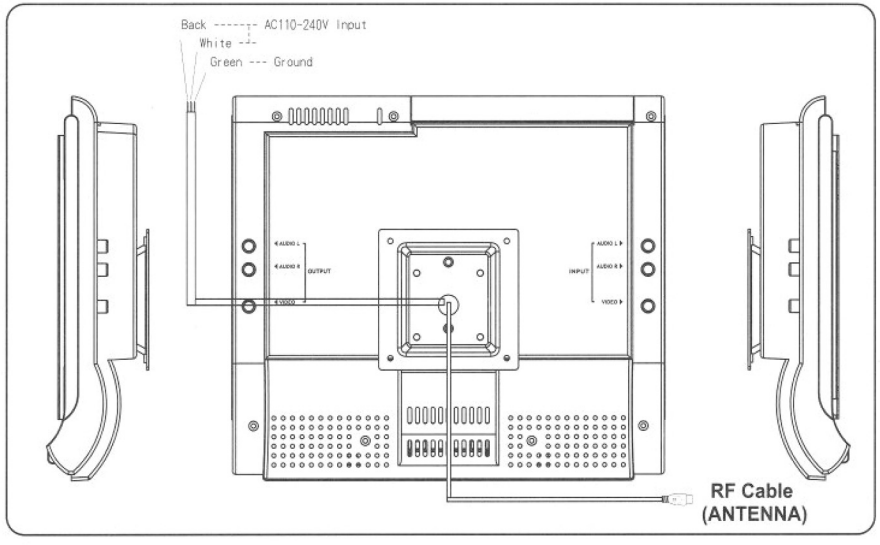

*** VESA conversion plate optional.**

Connecting to the AV IN Socket :

1. This unit is able to support various input setting. You can connect your video recorder, amplifier, game console etc, to the unit, to enjoy high quality, digital audio-visual effect.

2. Connect your AV cable to the equipment.

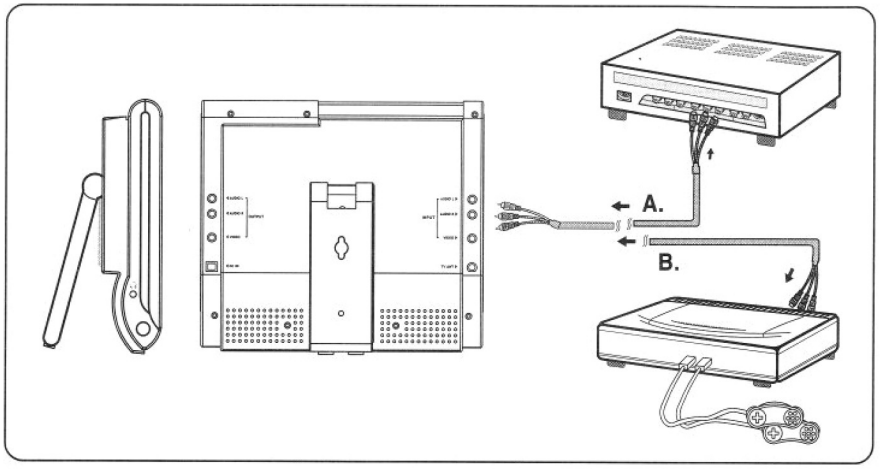

Output (RCA) to other AV Equipment:

Output the AV Signal using the unit AV output socket.

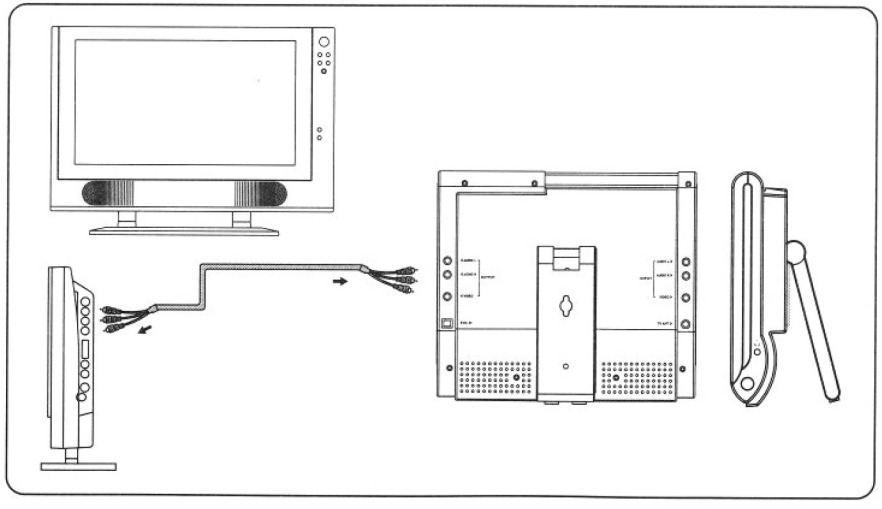

Connect Power:

Connect to the power source using the power cable and adapter provided.

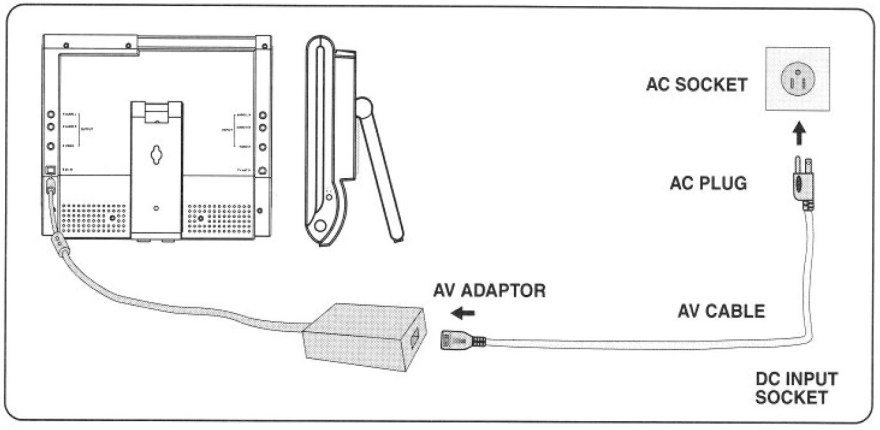

ATTENTION: *Ensure the power supply is connected to the unit. When not using unit for a long period of time, remove power adapter socket from the main power point.*

5. Basic Functions :

POWER SIGNAL:

1. POWER indication LED on unit turns RED in color indicating power is connected.
2. Press the **"ON/OFF"** button on front control panel or the **"Power"** button on remote, the POWER indication LED on the TV Front Panel will turn ***"GREEN in color"***.

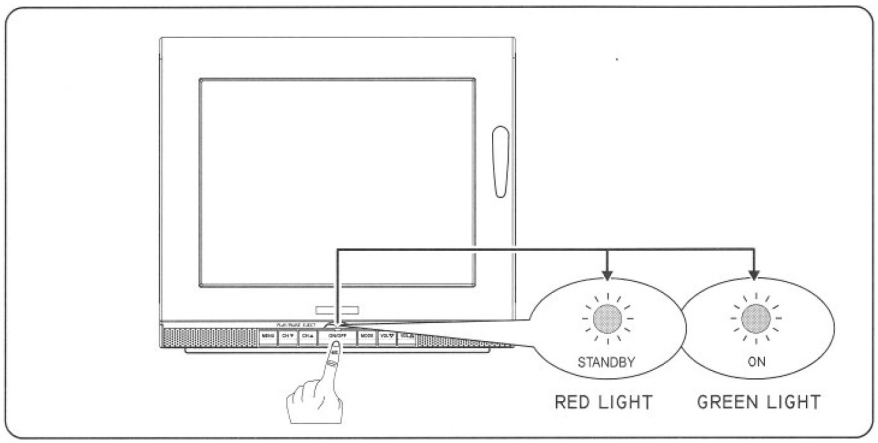

MODE:

1. Press the **"Mode"** button on remote or **"MENU"** button on front control panel to select from the various mode settings.
2. The mode setting status will change each time the **"Mode"** button is pressed – **"AV1 - CH"**

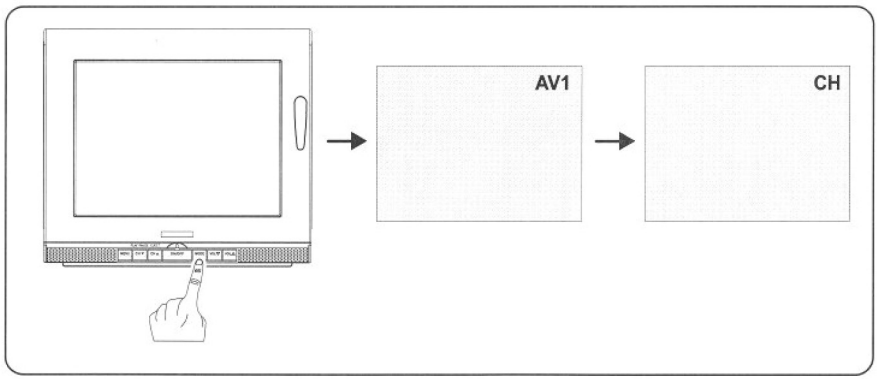

VOLUME SETTING:

Press the **"VOL △/▽"** button on front control panel or **"VOLUME ∧/∨"** on remote to adjust the volume level.

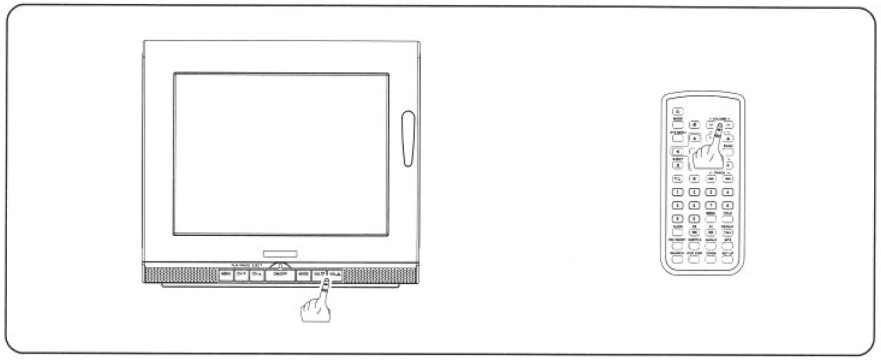

MUTE:

1. Press the **"Mute"** button on the remote control to mute speakers.
2. Press the **"Mute"** button again or the **"Volume Up/Down"** (▲/▼)button to return the sound back to the speakers.

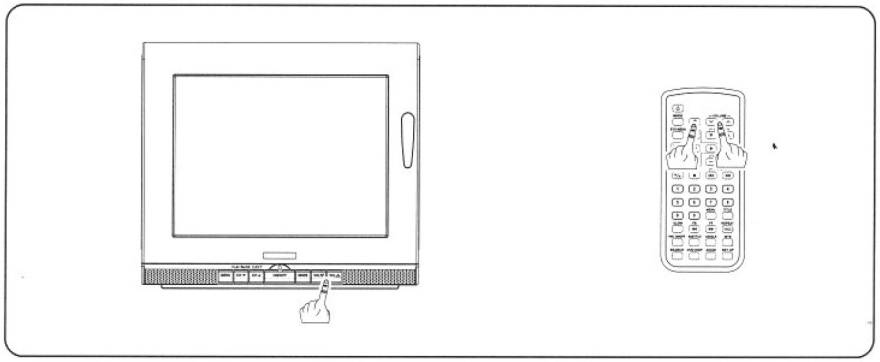

CHANNEL SEARCH:

1. Press the **"Channel Up/Down"** (▲/▼) button on remote or the TV Front control panel to change/select channels.
2. Press on the number buttons on the remote control to change/select channel directly.

TV Station Memory Mode:

1. Under TV mode, select channel by using "**CH/SET▲/▼**" on remote (eg. CH01).
2. Press "**ENTER**" button on remote, main menu option will display on the screen as below:

	CHANNEL	MEMORY
→ ◉	MEMORY 1	EMPTY
◉	MEMORY 2	EMPTY
◉	MEMORY 3	EMPTY
◉	MEMORY 4	EMPTY
◉	MEMORY 5	EMPTY
◉	MEMORY 6	EMPTY
◉	MEMORY 7	EMPTY
◉	MEMORY 8	EMPTY
◉	MEMORY 9	EMPTY
◉	MEMORY 10	EMPTY
◉	MEMORY 11	EMPTY
◉	MEMORY 12	EMPTY
◉	MEMORY 13	EMPTY
◉	MEMORY 14	EMPTY
◉	MEMORY 15	EMPTY
↵	EXIT	

3. Use (▲/▼) button on remote to select to select memory number to be set. (total 15 memory)
4. Press "**ENTER**" to return to TV channel, the memory number has been set to be the most frequent selected channels (eg. CH01).
5. Repeat above steps to set all 15 favorite channels.
6. After all memory has been set, press the "**MEMORY +/-** " button on remote to select favorite channels.

6. OPERATIONS:

Menu Setting :

This Unit provide the "**OSD**" setting, enable you to customize the setting for the following:

MAIN MENU
→ **SLEEP TIMER**
VIDEO ADJUST
FM TRANSMITTER
OTHERS
EXIT

Sleep Timer Setting:

1. Press "**Sys Menu**" button on remote or "**MENU**" button on front control panel, main menu options will be displayed on the TV screen.
2. Press "**Save/Enter**" button on remote or "**MENU**" button on front control panel, the text of the selected option will be highlighted in RED.
3. Press "**Left/Right**" (◄/►)button on remote or "**VOL △ /VOL▽**" button on front control panel to select the desired time setting of "**30/60/90/120**" minutes or "**OFF**".
4. Press "**Save/Enter**" button on remote or "**MENU**" button on front control panel to save the setting.
5. Press "**Sys Menu**" button on remote to exit main menu.

MAIN MENU
→ **SLEEP TIMER**
VIDEO ADJUST
FM TRANSMITTER
OTHERS
EXIT

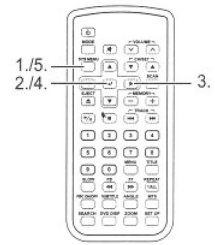

→ **SLEEP TIMER** 30
→ **SLEEP TIMER** 60
→ **SLEEP TIMER** 90
→ **SLEEP TIMER** 120
→ **SLEEP TIMER** OFF

Video Adjust Setting:

Saturation:

1. Press **"Sys Menu"** button on remote or **"MENU"** button on front control panel, main menu options will be displayed on the TV screen.
2. Press **"Up/Down"** (▲ / ▼)button on remote or **"VOL△ /VOL▽"** button on front control panel to select **"Video Adjust"** option.
3. Press **"Save/Enter"** button on remote or **"MENU"** button on fron control panel to confirm the selection.
4. Press **"Up/Down"** (▲ / ▼) button on remote or **"VOL△ /VOL▽"** on front control panel to select **"SATURATION"** option.
5. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel, the text of the selected option will be highlighted in **RED**.
6. Press **"Left/Right"** (◄ / ►) button on remote or **"VOL△ /VOL▽"** button on front control panel to adjust the **"Saturation"** Level.
7. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel to save the setting.
8. Press **"Sys Menu"** button on the remote control to exit main menu.

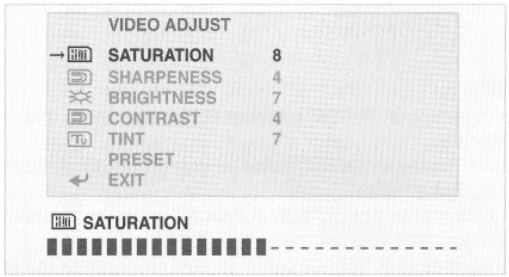

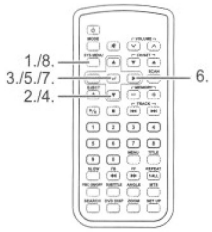

Sharpness:

1. Press **"Sys Menu"** button on remote or **"MENU"** button on front control panel, main menu options will be displayed on the TV screen.
2. Press **"Up/Down"** (▲ / ▼) button on remote or **"VOL△ /VOL▽"** button on front control paneto select **"Video Adjust"** option.
3. Press **"Save/Enter"** button on remote or **"MENU"** button on fron control panel to to confirm the selection.
4. Press **"Up/Down"** (▲ / ▼) button on remote or **"VOL △ /VOL▽"** button on front control panel to select **"SHARPNESS"** option.
5. Press **"Save/Enter"** buttonon remote or **"MENU"** button on front control panel, the text of the selected option will be highlighted in RED.
6. Press **"Left/Right"**(◄ / ►) button on remote or **"VOL △ /VOL▽"** button on front control panel to adjust the **"Sharpness"** Level.
7. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel to save the setting.
8. Press **"Sys Menu"** button on the remote control to exit main menu.

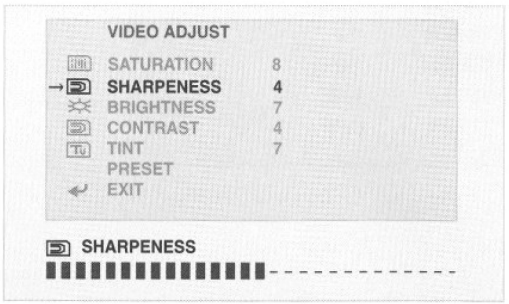

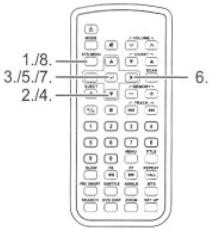

Brightness:

1. Press **"Sys Menu"** button on remote or **"MENU"** button on front control panel, main menu options will be displayed on the TV screen.
2. Press **"Up/Down"** (▲ / ▼) button on remote or **"VOL△ /VOL▽"** button on front control paneto select **"Video Adjust"** option.
3. Press **"Save/Enter"** button on remote or **"MENU"** button on fron control panel to to confirm the selection.
4. Press **"Up/Down"** (▲ / ▼) button **"VOL△ /VOL▽"** button on front control panel to select **"BRIGHTNESS"** option.
5. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel, the text of the selected option will be highlighted in RED.
6. Press **"Left/Right"**(◄ / ►) button on remote or **"VOL△ /VOL▽"** button on front control panel to adjust the **"BRIGHTNESS"** Level.
7. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel to save the setting.
8. Press **"Sys Menu"** button on the remote control to exit main menu.

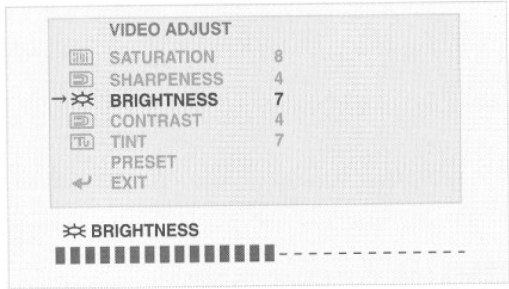

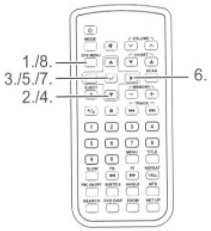

Contrast:

1. Press **"Sys Menu"** button on remote or **"MENU"** button on front control panel, main menu options will be displayed on the TV screen.
2. Press **"Up/Down"** (▲ / ▼) button on remote or **"VOL△ /VOL▽"** button on front control paneto select **"Video Adjust"** option.
3. Press **"Save/Enter"** button on remote or **"MENU"** button on fron control panel to to confirm the selection.
4. Press **"Up/Down"** (▲ / ▼) button **"VOL△ /VOL▽"** button on front control panel to select **"CONTRAST"** option.
5. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel, the text of the selected option will be highlighted in RED.
6. Press **"Left/Right"**(◄ / ►) button on remote or **"VOL△ /VOL▽"** button on front control panel to adjust the **"CONTRAST"** Level.
7. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel to save the setting.
8. Press **"Sys Menu"** button on the remote control to exit main menu.

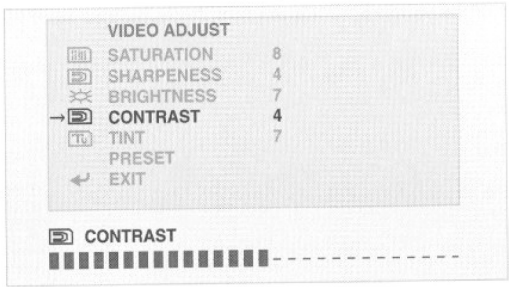

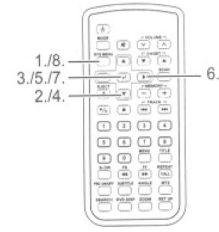

Tint:

1. Press **"Sys Menu"** button on remote or **"MENU"** button on front control panel, main menu options will be displayed on the TV screen.
2. Press **"Up/Down"** (▲/▼) button on remote or **"VOL△/VOL▽"** button on front control paneto select **"Video Adjust"** option.
3. Press **"Save/Enter"** button on remote or **"MENU"** button on fron control panel to to confirm the selection.
4. Press **"Up/Down"** (▲/▼) button **"VOL△/VOL▽"** button on front control panel to select **"TINT"** option.
5. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel, the text of the selected option will be highlighted in RED.
6. Press **"Left/Right"**(◄/►) button on remote or **"VOL△/VOL▽"** button on front control panel to adjust the **"TINT"** Level.
7. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel to save the setting.
8. Press **"Sys Menu"** button on the remote control to exit main menu.

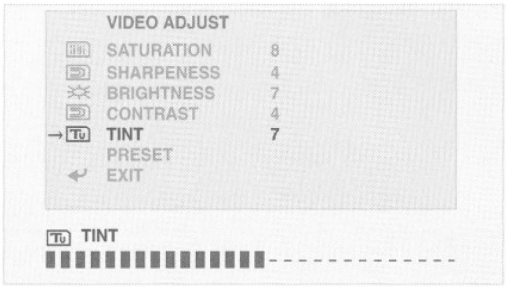

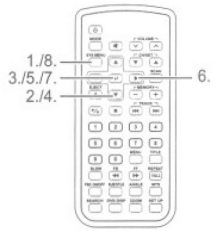

Preset:

1. Press **"Sys Menu"** button on remote or **"MENU"** button on front control panel, main menu options will be displayed on the TV screen.
2. Press **"Up/Down"** (▲/▼) button on remote or **"VOL△/VOL▽"** button on front control paneto select **"Video Adjust"** option.
3. Press **"Save/Enter"** button on remote or **"MENU"** button on fron control panel to to confirm the selection.
4. Press **"Up/Down"** (▲/▼) button on remote or **"VOL△/VOL▽"** button on front control panel to select **"PRESET"** option.
5. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel, the text of the selected option will be highlighted in RED.
6. Press **"Left/Right"**(◄/►) button on remote or **"VOL△/VOL▽"** button on front control panel to adjust the **"PRESET"** Level, then the setting will return back to the original factory setting.
7. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel to save the setting.
6. Press **"Sys Menu"** button on the remote control to exit main menu.

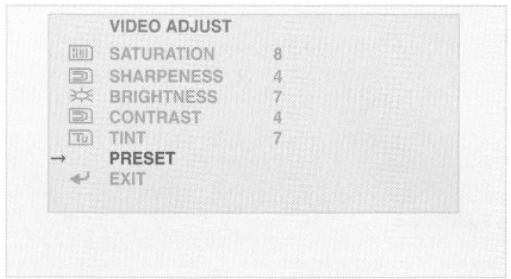

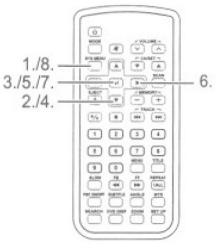

Exit:

1. Press **"Sys Menu"** button on remote or **"MENU"** button on front control panel, main menu options will be displayed on the TV screen.
2. Press **"Up/Down"** (▲/▼) button or **"VOL△/VOL▽"** button on front control paneto select **"Video Adjust"** option.
3. Press **"Save/Enter"** button or **"MENU"** button on fron control panel to to confirm the selection.
4. Press **"Up/Down"** (▲/▼) button **"VOL△/VOL▽"** button on front control panel to select **"EXIT"** option.
5. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel, the text of the selected option will be highlighted in RED.
6. Press **"Sys Menu"** button on the remote control to exit main menu.

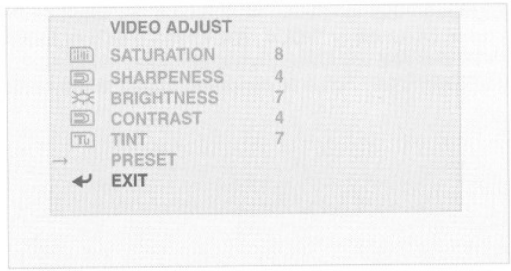

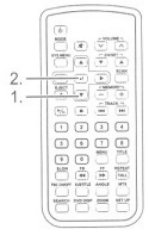

FM Transmitter:

1. Press **"Sys Menu"** button on remote or **"MENU"** button on front control panel, main menu options will be displayed on the TV screen.
2. Press **"Up/Down"** (▲/▼) button or **"VOL△/VOL▽"** button on front control paneto select **"FM TRANSMITTER"** option.
3. Press **"Save/Enter"** button on remote or **"MENU"** button on fron control panel to to confirm the selection.
4. Press **"Up/Down"** (▲/▼) button on remote or **"VOL△/VOL▽"** button on front control panel to select **"CH-X"** option,the text of the selected option will be highlighted in RED.
5. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel twice to save the setting.
6. Press **"Sys Menu"** button on the remote control to exit main menu.

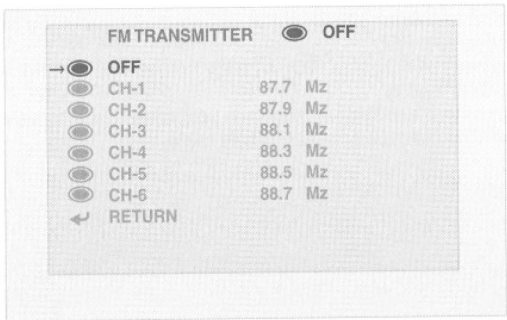

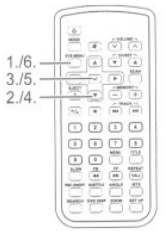

Others:

Channel Scan:

1. In TV mode, Press **"Sys Menu"** button on remote or **"MENU"** button on front control panel, main menu options will be displayed on the TV screen.
2. Press **"Up/Down"** (▲/▼) button on remote or **"VOL△/VOL▽"** button on front control paneto select **"OTHERS"**option.
3. Press **"Save/Enter"** button or **"MENU"** button on fron control panel to to confirm the selection.
4. Press **"Up/Down"** (▲/▼) button on remote or **"VOL△/VOL▽"** button on front control panel to select **"CHANNEL SCAN"** option.
5. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel, the text of the selected option will be highlighted in RED.
6. Press **"Left/Right"**(◄/►) button on remote or **"VOL△/VOL▽"** button on front control panel, then the monitor will start to scan for channels and stored them to the system memory.
7. When scan is finished, press **"Save/Enter"** button on remote or **"MENU"** button on front control panel to save the setting.

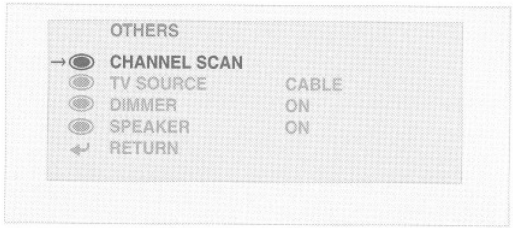

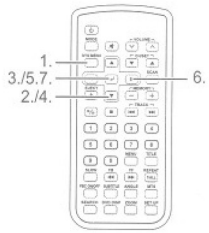

TV Source Setting:

1. In TV mode, Press **"Sys Menu"** button on remote or **"MENU"** button on front control panel, main menu options will be displayed on the TV screen.
2. Press **"Up/Down"** (▲/▼) button or **"VOL△/VOL▽"** button on front control paneto select **"OTHERS"** option.
3. Press **"Save/Enter"** button on remote or **"MENU"** button on fron control panel to to confirm the selection.
4. Press **"Up/Down"** (▲/▼) button on remote or **"VOL△/VOL▽"** button on front control panel to select **"TV SOURCE"** option.
5. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel, the text of the selected option will be highlighted in RED.
6. Press **"Left/Right"**(◄/►) button on remote or **"VOL△/VOL▽"** button on front control panel to select **"ANTENNA"** or **"CABLE"** option.
7. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel to save the setting.
8. Press **"Sys Menu"** button on the remote control to exit main menu.

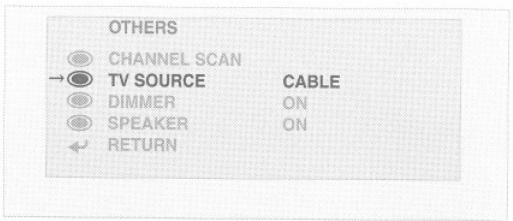

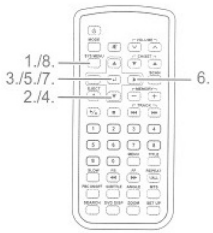

Dimmer Setting:

1. In TV mode, Press **"Sys Menu"** button on remote or **"MENU"** button on front control panel, main menu options will be displayed on the TV screen.
2. Press **"Up/Down"** (▲/▼) button or **"VOL△/VOL▽"** button on front control paneto select **"OTHERS"** option.
3. Press **"Save/Enter"** button or **"MENU"** button on fron control panel to to confirm the selection.
4. Press **"Up/Down"** (▲/▼) button on remote or **"VOL△/VOL▽"** button on front control panel to select **"DIMMER"** option.
5. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel, the text of the selected option will be highlighted in RED.
6. Press **"Left/Right"**(◄/►) button on remote or **"VOL△/VOL▽"** button on front control panel to select **"ON"** or **"OFF"** option.
7. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel to save the setting.
8. Press **"Sys Menu"** button on the remote control to exit main menu.

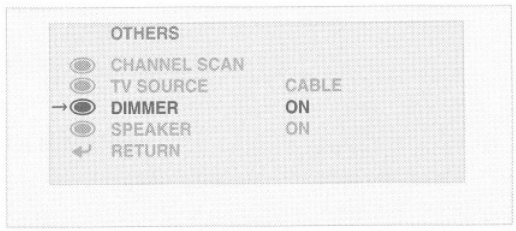

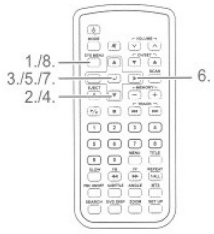

Speaker Setting:

1. In TV mode, Press **"Sys Menu"** button on remote or **"MENU"** button on front control panel, main menu options will be displayed on the TV screen.
2. Press **"Up/Down"** (▲/▼) button on remote or **"VOL△/VOL▽"** button on front control paneto select **"OTHERS"**option.
3. Press **"Save/Enter"** button or **"MENU"** button on fron control panel to to confirm the selection.
4. Press **"Up/Down"** (▲/▼) button **"VOL△/VOL▽"** button on front control panel to select **"SPEAKER"** option.
5. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel, the text of the selected option will be highlighted in RED.
6. Press **"Left/Right"**(◄/►) button on remote or **"VOL△/VOL▽"** button on front control panel to select **"ON"** or **"OFF"** option.
7. Press **"Save/Enter"** button on remote or **"MENU"** button on front control panel to save the setting.
8. Press **"Sys Menu"** button on the remote control to exit main menu.

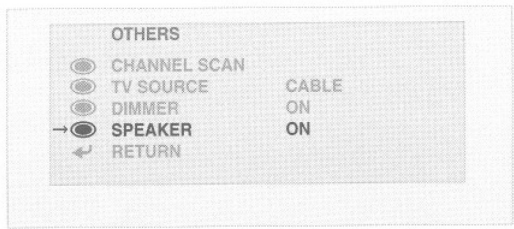

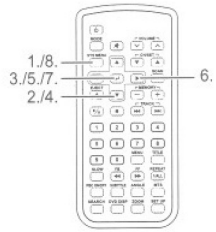

Return:

1. Select the **"Return"** option under the **"Audio Adjust"** Menu using the **"Up/Down"** (▲/▼) button on remote or **"VOL△/VOL▽"** button on front control panel.
2. Press **"Save /Enter"** button to return to the Main Menu Screen.

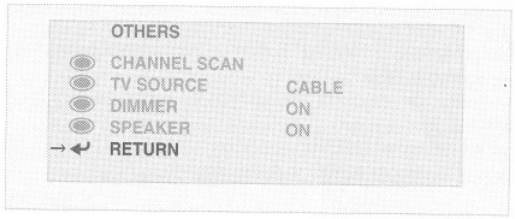

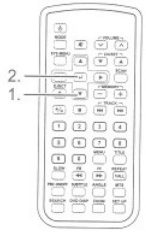

7. General Setup:

*Use the "**Up/Down**" (▲/▼)button to scroll to "**General Setup**" option and press "**Enter**" button. The following will be displayed on the TV Screen.*

(a) TV DISPLAY

(1) NORMAL/PS
(2) NORMAL/LB
(3) WIDE

(b) PIC MODE

(1) AUTO
(2) HI-RES
(3) N-FLICKER

(c) ANGLE MARK

ON
OFF

(d) OSD LANG

ENGLISH
CHINESE

(e) CAPTIONS

ON
OFF

(f) MAIN PAGE

(g) SPEAKER SETUP

(g-1) DOWNMIX

LT/RT
STEREO

(h) AUDIO SETUP

(h-1) DUAL MONO

STEREO
L-MONO
R-MONO
MIX-MONO

(h-2) DYNAMIC

FULL
6/8
4/8
2/8
OFF

(h-3) MAIN PAGE

(i) KARAOKE SETUP

(i-1) KARAOKE

OFF
KARAOKE

(i-2) MAIN PAGE

(j) PREFERENCES PAGE

(j-1) TV TYPE

(1) MULTI
(2) NTSC
(3) PAL

(j-2) AUDIO —

(1) ENGLISH
(2) FRENCH
(3) SPANISH
(4) CHINESE
(5) JAPANESE

(k) PARENTAL RESTRICTION – Using **"Up/Down"** (▲/ ▼)or Number Buttons, Select Parental Restriction, Press **"Enter"**, unit will request for password, key in **"1234"**.

1 G
2
3 PG
4 PG 13
5
6 PG-R
7 NC-17
8 ADULT
NO PARENTAL

(l) PASSWORD – Change PASSWORD, Enter **"1234"**, key in the NEW PASSWORD using Number buttons, Press **"Enter"** button, the process to change PASSWORD will be completed.

CHANGE

(m) DEFAULTS – Reset

(n) MAIN PAGE

(o) EXIT SETUP

8. ANNEX A

LCD Monitor Care & Cleaning Tips:

To avoid possible shock hazard, be sure the LCD TV is turn off and unplugged from the main electrical outlet before cleaning.

Do not use any form of solvents on the LCD monitor.

Cleaning the LCD Monitor:

1. Use a soft, clean & dry cloth to gently wipe off the dust on the LCD monitor.
2. Use a clean cloth dampened with water to wipe off the dirt.
3. Do not exert force when cleaning the LCD monitor.

Cleaning the Enclosure:

1. Use a soft, clean & dry cloth to gently wipe off the dust on the LCD monitor.
2. Use a clean cloth dampened with water to wipe off the dirt.
3. Do not exert force when cleaning the LCD monitor.

9. ANNEX B

Troubleshooting:

If the unit fails to operate normally, try solving the problems using the guide below. If the problem persists, switch off the unit and ask the dealer or technical services for assistance. Do not attempt to repair the defective unit yourself. Do not endanger yourself as high voltage is involved.

1. No Picture

a. Check that the power cord is plugged into the main socket and the power supply is turned on.
b. Check the contrast and brightness setting.
c. Check the Antenna connection to see if it is properly connected to the LCD TV Input Terminal.
d. Be sure you have selected the correct source mode.

2. Snowish Picture

a. Check to see if the Antenna is correctly connected.
b. Check to see if the picture setting is correctly set.

3. Picture Flickers

a. Check that the power coming from the main socket is sufficient.
b. Check that unit is not placed too near speakers or magnetic objects.
c. Check to see that the unit setting is correctly set.

4. Color Patch(Unevenness)

Be sure you have made connection correctly.

5. Horizontal Dotted

Be sure you have made connection correctly.

6. No Sound

a. Check that mute function is off.
b. Increase the volume.

7. Remote Control not Working.

a. Check batteries are installed correctly, replaced if necessary.
b. Aim the remote controller towards the unit remote sensor.

10. SPECIFICATIONS:

PRODUCT TYPE	10.4" 4:3 DIGITAL LCD TV
LCD PANEL	10.4" 4:3 LCD PANEL
BRIGHTNESS	250cd/m^2
RATIO	200:1
BACKLIGHT	10000hrs NORMAL OPERATION
DISPLAY ANGLE	Vertical:170° / Horizontal:170°
AV INPUT/OUTPUT	AV INPUT / AV OUTPUT
OSD LANGUAGE	ENGLISH / CHINESE
OPERATING VOLTAGE	AC110-230V 50Hz DC:9-12V 4A
IR TRANSMITTER	L:2.3Mhz R:2.8Mhz EFFECTIVE ANGLE:45° EFFECTIVE RANGE:4 METRE
REMOTE	REMOTE RANGE:5 METRE
TV SPECIFICATION	NTSC ; NTSC-JAPAN PAL-BG ; PAL-I ; PAL-DK
ACCESSORIES(INCL)	1. USER MANUAL 2. REMOTE CONTROL(w/BATTERY) 3. AC ADAPTOR 4. AC CABLE 5. DC POWER PLUG 6. Optional AV CABLE
FM TRANSMITTER	CH1 : 87.7 MHz CH2 : 87.9 MHz CH3 : 88.1 MHz CH4 : 88.3 MHz CH5 : 88.5 MHz CH6 : 88.7 MHz

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
16. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, shall not be placed on the apparatus.